





FLASH STARTER MAINTENANCE

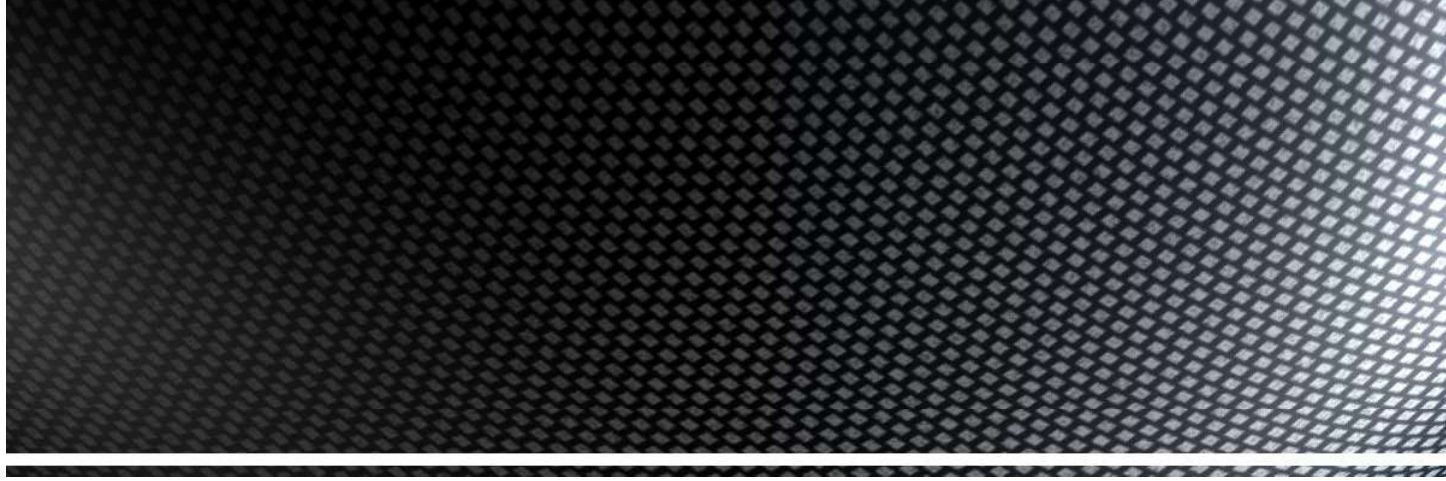

HOW TO SAFELY REMOVE THE SPRING

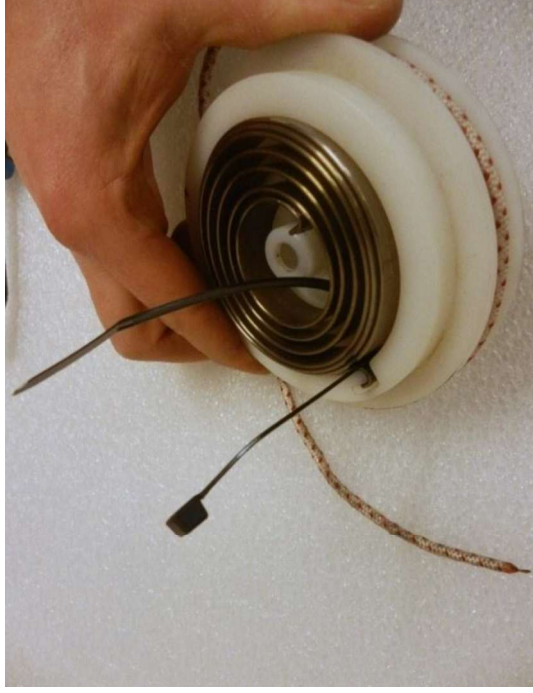

Lift up the spring to insert a safety clip in this specific position. This is to avoid that the spring unrolls and hits someone

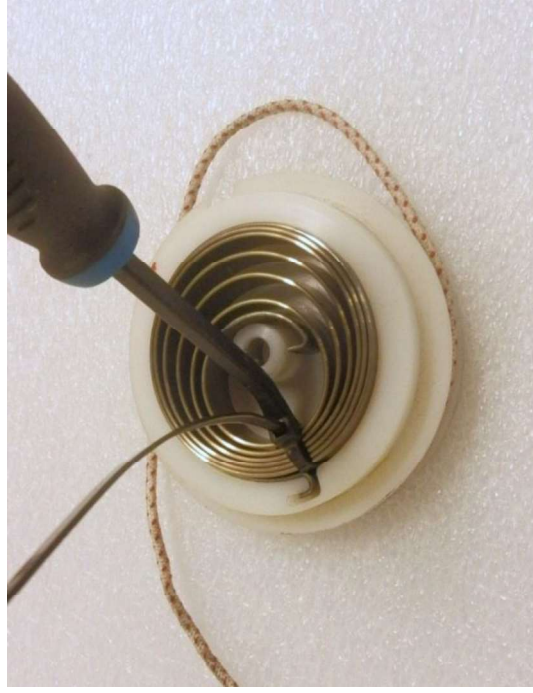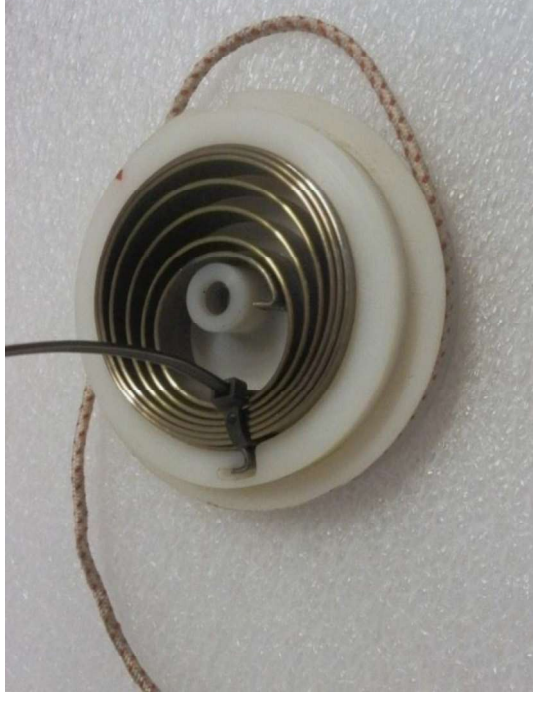

Remove the spring using as a lever a large and flat screwdriver



HOW TO ASSEMBLE THE FLASH STARTER



Make a knot
to the rope
and press it in
a vice



Fill the hole
with hot glue
and make
sure the glue
doesn't exit
from the
edge of the
hole






Press in the
small spring,
to get this
result →





Press in the
big spring
with the help
of a metal
bar, keeping
the bar in
this specific
position

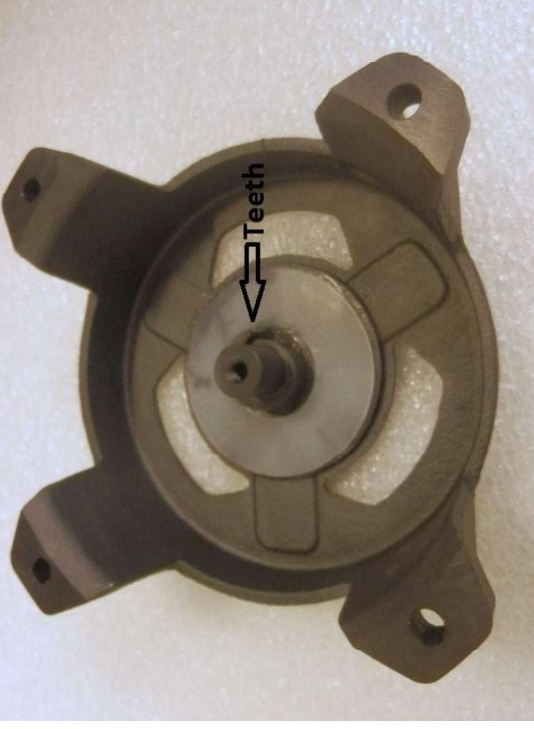

Grease the bottom of the flash starter and insert the thin plastic disk



Grease also the upper part of the plastic disk and the central hub of the flash starter, paying attention not to dirty the thread of the hub

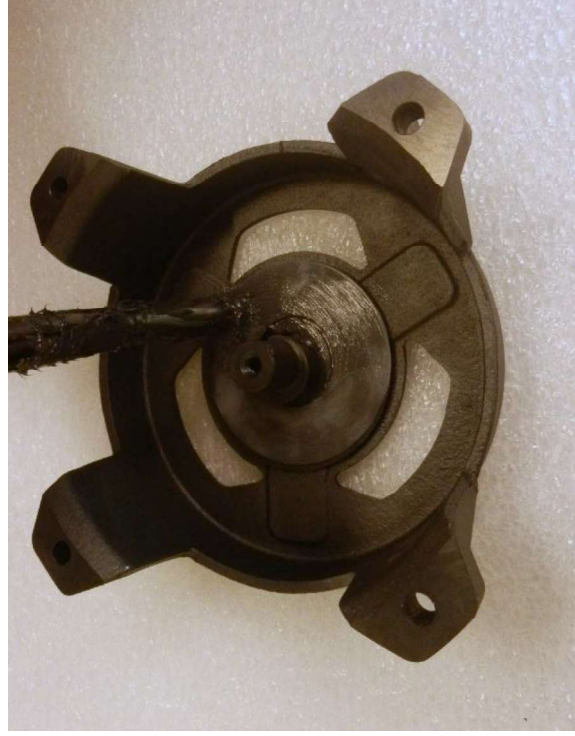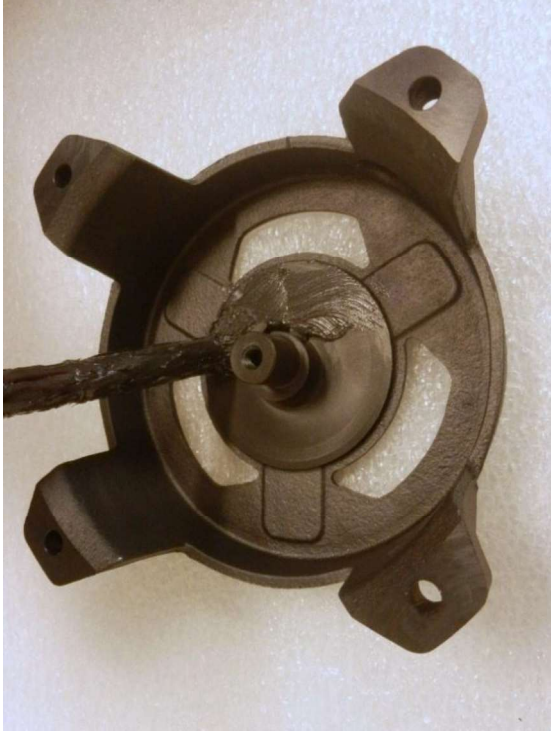




Insert the pulley paying attention to fix the small spring in the teeth of picture 2 of previous page



Pre-charge the spring making only one turn of the rope and let it exit from its seat with the help of a hook

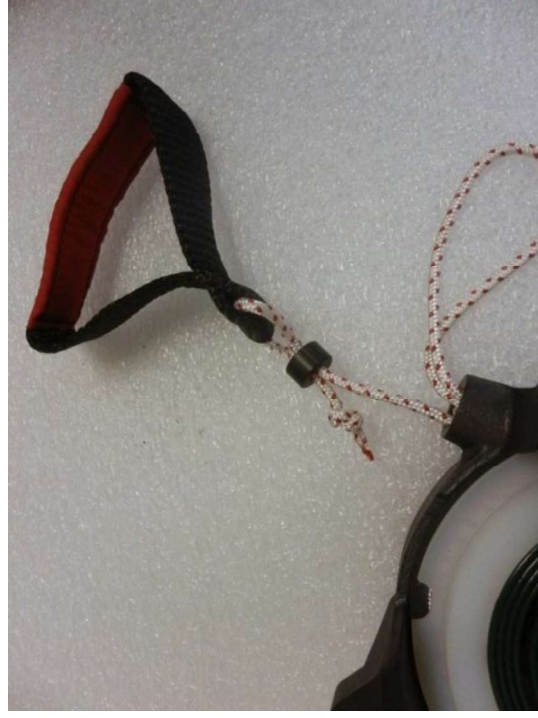

Insert in the rope the black rubber washer and the handle and tie them



Grease the lower part of the pulley driver and the internal part of the big spring



Place the pulley driver in its seat





Take the
tugger bolt
and screw it
on the pulley
driver, using
strong glue
on the thread
of the screw.
Tighten the
screw very
firmly.



Here you go,
the flash
starter is
ready!